


**DOSATRON®**

WATER POWERED DOSING TECHNOLOGY

## Nutrient Delivery System Models

MODEL NUMBER	MODEL
D25RE09VFBPHY	
D14MZ2VFBPHY	
D14MZ10YFBPHY	
D14MZ3000VFBPHY	

# Nutrient Delivery System

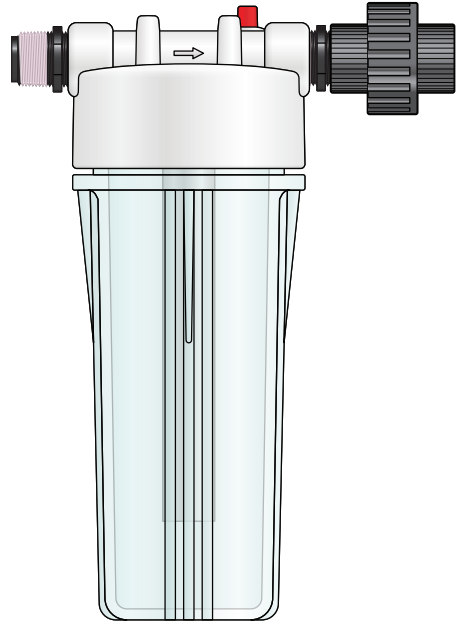

## Mixing Chamber Kit Part #: HYKMC34



**DOSATRON®**

WATER POWERED DOSING TECHNOLOGY

2090 Sunnydale Blvd. • Clearwater, FL 33765  
800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)


Mixing Chamber Kit includes parts listed.  
Dosatron injector sold separately.

# Mixing Chamber Kit

## Step-by-Step Assembly Instructions

1

Wrap **Teflon®** tape\* on both ends of the two **Nipples**.

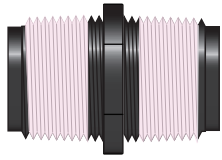


2

Insert the **Nipples** into each side of the **Mixing Chamber**.



3

With the arrow on the **Mixing Chamber** pointing in the direction of the water flow, install the **Union** onto the **Nipple** of the outlet side of the **Mixing Chamber**.

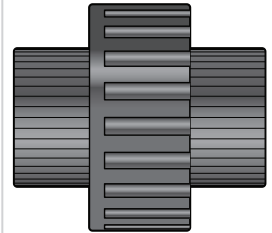

### Kit Includes:

- 1 - Mixing Chamber
- 1 - Union
- 2 - Nipples
- 1 - Roll of pink Teflon® tape

Dimensions: 9" wide x 15" high

\* Wrap 3-4 turns of the pink Teflon® tape included in your kit. If you are using white Teflon® tape, wrap 6-8 turns. To wrap, hold the part in your left hand and wrap the Teflon® tape clockwise.